



Trailer Maintenance Schedule

In addition to the pre-trip daily inspection, your Palmer trailer must have maintenance service at regular intervals for keeping your trailer in peak operating condition.

Required Trailer Maintenance

- **Each 30,000-miles or six-months (Whichever comes first)** - Bring trailer to Palmer Leasing (3 Union Seventy Center Drive, St. Louis, MO 63120) for regular maintenance.

NOTE: All maintenance periods are recommendations based on average operating conditions. A trailer may require maintenance more frequently depending on how it is used, environment or other factors.

Palmer Leasing, Inc.
3 Union Seventy Center Drive
St. Louis, Missouri 63120
(314) 389-4400
www.palmerleasing.com